


oxo on[•]

Bright

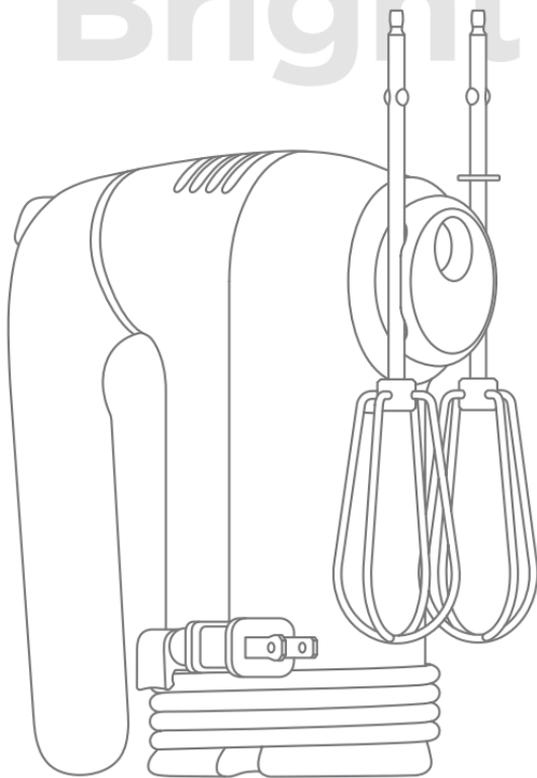

ILLUMINATING DIGITAL HAND MIXER
INSTRUCTIONS FOR USE



CONGRATULATIONS
on your new OXO On appliance!

Don't forget to register your product
at OXO.com/registration.aspx
for updates and other relevant information.

Although greatly appreciated, product registration is not required to activate any warranty.

See your batter in a new light

Cream cheese frosting, chocolate brownies, whipped cream, fluffy meringue. All of these yummy treats depend on precise mixing. With a light to guide you, intuitive digital controls to steadily increase or decrease speed, and a consistent, DC motor that maintains its power no matter the workload, OXO's Illuminating Digital Hand Mixer gives you the control to create the perfect result. And when you're finished, the on-board beater clip, wrap-and-secure cord and flat, stable base allow for compact, upright storage.

The Bright Hand Mixer will help make light work of your baking adventures from beginning to end.

A Note About Safety	3	Troubleshooting.....	10
Before We Begin	5	Cleaning, Care and Storage....	11
Quick Start Guide	6	Our Guarantee.....	12
Meet Your Mixer	7	Registration Info.....	12
The Particulars of Mixing	9		

A Note About Safety



IMPORTANT SAFEGUARDS

Read all instructions.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- **Read All Instructions.** Use this product only as described in this manual.
- Keep the packaging material (cardboard, plastic, etc.) out of the reach of children (danger of asphyxiation or injury).
- To protect against fire, electrical shock and injury to persons, do not immerse cord, plugs or Mixer body in water or other liquid. If the Mixer falls into liquid, unplug the unit first, then remove the Mixer immediately. Do not reach into the liquid without unplugging the unit first.
- Do not leave the appliance unattended when in use.
- Close supervision is necessary when any appliance is used near or by children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any way or is not operating properly. Contact OXO Customer Service at (800) 545-4411. Do not return to store.
- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- Do not touch hot surfaces. Use the handle.
- Do not let the cord hang over the edge of a table or counter where it can be pulled on by children or tripped over unintentionally. Do not let the cord touch hot surfaces or become knotted.
- Ensure the cord is fully unwound before using Mixer.
- Do not use Mixer with damaged, twisted or frayed power cord. Store only as directed.
- Always ensure that the attachments are securely fitted onto the motor body before operation. Follow the instructions provided in this book.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from all accessories during operation to reduce the risk of injury to persons and/or damage to the Hand Mixer.
- The use of accessory attachments not recommended by OXO may result in fire, electric shock or personal injury.
- Handle the attachments with care. Never place your fingers inside a mixing bowl or near attachments during use.
- If food becomes lodged in or around the attachments, turn any control to “off.” Remove the plug from the power outlet. Ensure the motor and beaters have completely stopped before pressing EJECT button to remove the attachments. Use a spatula to dislodge the food before continuing.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not operate this appliance continuously for heavy loads for longer than 1 minute at a time as this can cause overheating. Allow the motor to cool for at least 1 minute between each use.

- Remove any accessories from Mixer before cleaning.
- Strictly follow the care and cleaning instructions described in this book.
- Do not obstruct vents in any way during use.
- Do not use this appliance for other than its intended use.
- Do not use outdoors.
- **This appliance is intended for household use only.**

SAVE THESE INSTRUCTIONS.

 **WARNING! Shock Hazard:** This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet. Do not plug this appliance into an outlet with a voltage other than specified on the Hand Mixer.

Do not use an adapter with this appliance.

SHORT CORD STATEMENT

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the Hand Mixer.

Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

To avoid an electrical circuit overload, do not use any high wattage appliance on the same circuit with your Hand Mixer.

 **CAUTION!** 

MOVING PARTS HAZARD

TO REDUCE RISK OF INJURY, ALWAYS UNPLUG MIXER BEFORE INSERTING OR REMOVING BEATERS.

 This symbol alerts you to important operating and service instructions.

 **WARNING!** 

SHOCK HAZARD

ONLY FOR USE WITH 110V AC OUTLET.

DO NOT USE ADAPTER.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN DEATH, FIRE OR ELECTRICAL SHOCK.

 This symbol alerts you to the risk of fire or electric shock in the accompanying message.


Before We Begin

1. Remove and recycle or discard all stickers, descriptive labels, cable ties and packing materials, including static stickers and hangtags with ties.
2. Wash beaters and dough hooks with warm water and mild detergent. Rinse and dry thoroughly. Beaters and dough hooks are also dishwasher safe.
3. Wipe body of appliance with a soft, damp cloth and dry thoroughly.

 **CAUTION:** Do not put Mixer body in dishwasher or immerse in water. Do not use abrasive pads, harsh chemicals or spray cleaner chemicals to clean your Mixer.

Quick Start Guide

1. Insert beater with metal collar into large hole, and beater without metal collar into small hole. Press firmly until they click to ensure they are locked into place.
2. Plug Mixer into 110V outlet.
3. Place beaters into bowl. Press the power button to turn the Mixer on. Headlight will be softly lit.
4. To start mixing, press the “up” arrow button. The headlight will brighten for better visibility into your bowl.
5. Press the “up” arrow again to increase speed. Press the “down” arrow to decrease speed.
6. To learn more about how to use your Mixer, check out “The Particulars of Mixing” on pg. 9.

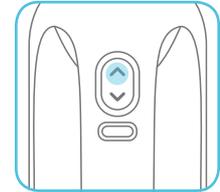



EASY BEATER RELEASE

Beaters are ejected with a simple push of the eject button for easy cleaning



LED POWER DISPLAY

Backlit indicator clearly shows speed selection



INTUITIVE DIGITAL CONTROLS

Soft-touch controls allow you to smoothly adjust mixing speed



STEADY, QUIET MOTOR

DC motor holds consistent speed, even as your batter thickens (like cruise control!)



SOFT, NON-SLIP HANDLE

Soft, comfortable handle is non-slip, even when your hands are wet



CORD FLIP

Cord swivels and snaps into either side of the Mixer to stay safely out of your way

Set of dough hooks included for extra-thick batter



Meet Your Mixer



SIX DIGITAL SPEEDS

Mixer features a splatter-free slow start and a range of speeds from light mixing to heavy whipping



COMPACT STORAGE

Beaters store on beater clip on Mixer body and cord wraps and secures around base for compact, upright storage



SOFT-GLOW LED HEADLIGHT

Headlight illuminates bowl as you mix, allowing you to monitor batter consistency, and remains on for safety as long as Mixer is powered on



BALLOON-SHAPED BEATERS

Whisk design ideal for efficiently mixing everything from egg whites to cookie dough




STABLE BASE


Flat base allows Mixer to rest on countertops while pausing during mixing

The Particulars of Mixing

1. Ensure the Mixer power cord is unplugged and the beater clip is removed from Mixer body.

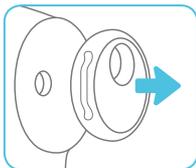


2. Align and insert each beater or dough hook into the appropriate hole. The beaters may require twisting in order to line up properly. Push each beater firmly into hole until they lock into place. To test security, gently turn beater by hand; if it's locked properly, the beater won't spin easily.

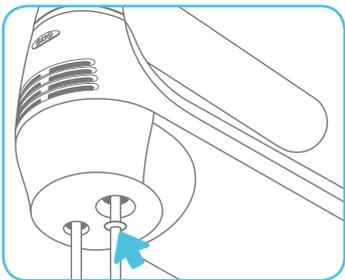

NOTE:

- The beater with the metal collar should be inserted into the larger hole, while beater without the collar should be inserted into the smaller hole.
 - Use dough hooks instead of balloon shaped beaters for heavier batters like bread dough.
3. Add your ingredients into a mixing bowl as recipe directs.
 4. Plug power cord into 110V outlet.

5. Your OXO Mixer is designed with a two-way cord snap that allows for frustration-free use whether you are right- or left-handed, or to make sure the cord is never over your bowl. Adjust the cord direction to best suit your needs.

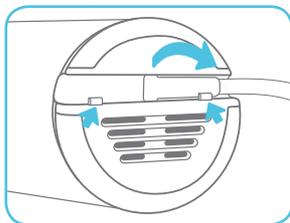

6. Move the Mixer over the bowl and place the beaters into ingredients. Press the power button to turn Mixer on. Headlight will be softly lit, indicating the Mixer is powered on.

7. To start mixing, press the “up” arrow button. The headlight will brighten for better visibility into your bowl.
 - a. To increase speed, press the “up” arrow button until desired speed is reached. One short push will bring the Mixer to the next speed. Holding down the “up” arrow button will gradually take the Mixer to the maximum speed.



- b. To decrease speed, press the “down” arrow button. Headlight will maintain brightness.

NOTE: To avoid splatter, OXO recommends starting with a low speed and gradually increasing to high speed.

8. For even mixing, move the Mixer in a slight circular motion.
9. To stop mixing, press the “down” arrow button until Mixer stops, or press the power button. Headlight will return to being softly lit. Press power button again to power down Mixer and turn off headlight.
10. Unplug the power cord from the outlet after use.



CAUTION:

- Do not operate the Mixer continuously for longer than 4 minutes. Allow the motor to rest for 2 minutes between each use.
- Avoid contact with the beaters during operation. Keep hands, hair, clothing, spatulas and other utensils away from spinning beaters to prevent personal injury or damage to the Mixer.
- Ensure the Mixer is unplugged from the power outlet before inserting beaters.
- Always turn the Mixer off and unplug from outlet before scraping down the sides of the mixing bowl.

Troubleshooting

You have questions, we have answers. For more information, call OXO Customer Service at 1-800-545-4411.

Question/Problem	Explanation/Solution
Headlight is dim	➔ The headlight will be dimly lit after pushing the on/off switch, and will only increase to full brightness when mixing. After a few seconds, it will return to the dim setting.
Mixer shut off while in use	➔ It's possible the beaters are blocked or jammed. When this happens, the motor automatically shuts off as a safety precaution to prevent overheating or burnout. If this happens, unplug the Mixer and carefully free up the beaters, then it will be ready to use again.
Mixer shut off but beaters are not jammed	➔ Your hand may have hit the power button while you were mixing. Press the power button again and press the “up” arrow to restart mixing.
Mixer sounds like it's oscillating or ramping up and down while in use	➔ This is a good sound! This means the DC motor is automatically adjusting to maintain speed, regardless of your batter's consistency.
Beater release button is stiff/hard to press	➔ This is just because your Mixer is brand new. It should loosen up and be easier to press after the first few uses.
Mixer body is warm	➔ The Mixer body will get warm while it's plugged in or while it's in use from the electricity running to the motor. This is normal and won't affect the performance of your Mixer. OXO recommends using the Mixer continuously for no longer than 4 minutes and let it rest for 2 minutes to protect the motor.

Cleaning, Care and Storage

TO CLEAN YOUR MIXER:

Any service or maintenance other than cleaning should be performed by an authorized service representative. For more information, call OXO Customer Service at 1-800-545-4411.

1. Always unplug power cord from outlet before cleaning.
2. Remove the beaters or dough hooks from the Mixer by pressing the eject button.
3. Metal beaters and dough hooks are dishwasher safe. Do not allow beaters or dough hooks to soak in water for an extended period of time as this may damage the metal finish.
4. Wipe the motor body with a damp cloth and dry thoroughly.
5. Wipe the cord to remove any food that may have accumulated.

 **CAUTION:** Do not put Mixer body in dishwasher. Do not use abrasive pads, harsh chemicals or spray cleaner chemicals to clean your Mixer. These may damage the surface of the Mixer body.

STORAGE:

Always turn off and unplug your Mixer from outlet before storing. Follow cleaning instructions. Wrap the power cord around the motor body and use the cord clip to secure the cord in place. Snap one beater into each side of the beater clip and insert beater clip into beater holes on Mixer body. Store your Mixer in a upright position.

REPLACEMENT PARTS:

If you want to purchase additional beaters, dough hooks or clips, please call OXO Customer Service at 1-800-545-4411.

WARNING!

SHOCK HAZARD

ONLY FOR USE WITH 110V AC OUTLET.

DO NOT USE ADAPTER.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN DEATH, FIRE OR ELECTRICAL SHOCK.

CAUTION!

MOVING PARTS HAZARD

TO REDUCE RISK OF INJURY, ALWAYS UNPLUG MIXER BEFORE INSERTING OR REMOVING BEATERS.

Our Guarantee

TWO-YEAR WARRANTY:

We guarantee everything we make! Starting from the date of purchase, your OXO On Illuminating Digital Hand Mixer is guaranteed by OXO for two years in the case of any manufacturing defects in materials or workmanship. This OXO warranty is only offered on OXO On appliances sold and used in the US and Canada.

The OXO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. OXO's exclusive obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claims, so please keep it in a safe place. We recommend that you register your product on our website, www.oxo.com/registration.aspx. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.

The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product.

The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by OXO, are used.

You may also arrange for service after the warranty expires at an added cost.

For questions, returns, repairs or warranty claims within the US, please visit www.oxo.com or contact OXO Customer Service at **(800) 545-4411**. We will be glad to assist you.

For customer service, claims or questions on sales in Canada, OXO Customer Service will gladly put you in touch with the appropriate individuals.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country or province to province. The customer may assert any such rights at their sole discretion.

CONTACT INFO:

If you have any trouble with the product during the warranty period, do not attempt to return it to a retail store. Instead, please visit us online at www.oxo.com or contact us at:

OXO U.S. Customer Service

Hours: Monday – Friday, 8:00am – 5:00pm (ET)

Phone: (800) 545-4411 **Fax:** (717) 709-5350

Mail: OXO International, Inc. at 1331 S Seventh St. Ste 4,
Chambersburg, PA 17201-9912

Email: info@oxo.com

Outside the U.S.

Please contact your local distributor or email info@oxo.com

REGISTRATION INFO:

For product registration, please visit us online at www.oxo.com/registration.aspx or call toll free at **1-800-545-4411**.

Please be advised that as part of our privacy policy we never sell or give away your private information.

It's On

For over 25 years, OXO's mission has been to provide innovative consumer products that make everyday living easier.

How do we do it? We study people – lefties and righties, male and female, young and old – interacting with products and we identify opportunities for meaningful improvement. Our “question everything” process and relentless attention to detail allow us to design products that help consumers make short work of everyday tasks.

We've applied the same philosophy to OXO On, our line of intelligent kitchen appliances. Through intuitive interfaces, innovative digital controls and backlit LED displays, our On appliances give you the simplicity, functionality and thoughtfulness you've come to expect from OXO...

...all with the touch of a button.

©2015

OXO International Ltd.

1 Helen of Troy Plaza

El Paso, TX 79912

Printed in China

IB-8710700-00